



SIMPLE. CLEAN. EFFICIENT. ▶▶▶



Machine Detergent Universal

MACHINE DISHWASHER DETERGENT

POWERED BY
ECOLAB



DESCRIPTION:

A universal machine dishwasher detergent effective on daily stains and soils providing excellent cleaning results.

- Suitable for all water conditions
- Ecologically formulated - NTA, EDTA, phosphate and chlorine-free
- Economical to use leaving dishes sparkling clean



USE INSTRUCTIONS:

For use in professional and semi-professional dishwashing machines. Always attempt to wash full machines whenever possible.

1. Always wear recommended PPE when handling the product
2. Remove cap from empty bottle and carefully remove the feed pipe NOTE: Never mix chemicals, if you are changing products, rinse the feed pipe with water first otherwise blockages may occur
3. Remove empty container and place new container in the basket
4. Remove cap and carefully reinsert the feed pipe back into the new bottle
5. Retighten the cap
6. Dispose of empty containers responsibly, always replace with the new cap



SAFETY AND STORAGE:

- Do not mix with any other product.
- For further information and safety instructions, please see product label and Safety Data Sheet.
- Store between 0 °C and 40 °C in original closed container only.



APPLICATION:

Mechanical warewashing of glassware, crockery, cutlery, bowls and all food preparation utensils. Do not use on aluminium and other soft metals

PRODUCT CODE: PACK SIZE:

9104760 2x5L



ADDITIONAL RESOURCES



- MSDS
- WALLCHARTS
- PRODUCT GUIDES



Worldwide Headquarter
Ecolab Inc.
1 Ecolab Place, St. Paul, MN55102
1.800.35.CLEAN

European Headquarter
Ecolab Europe GmbH
Richtstr. 7
CH-8304 Wallisellen